






Installing 2-ply #30 Organic Felt Underlayment to Seal the Roof Deck

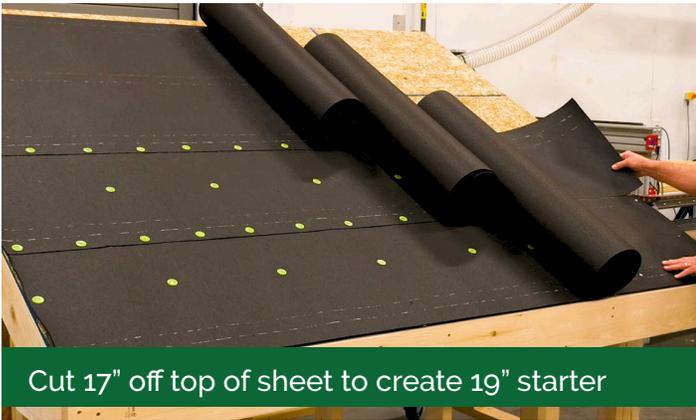

Cut 17" off top of sheet to create 19" starter

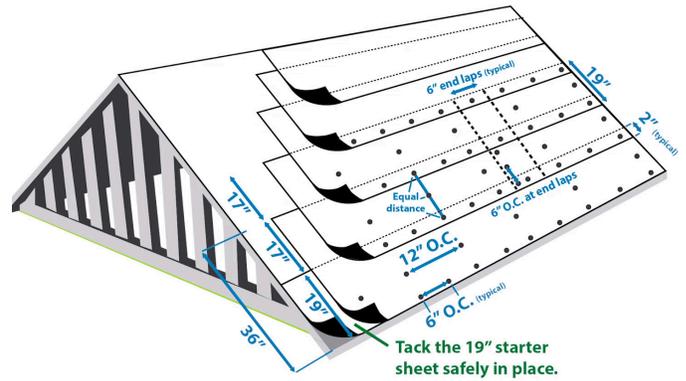


Tack starter in place and start full roll from eave

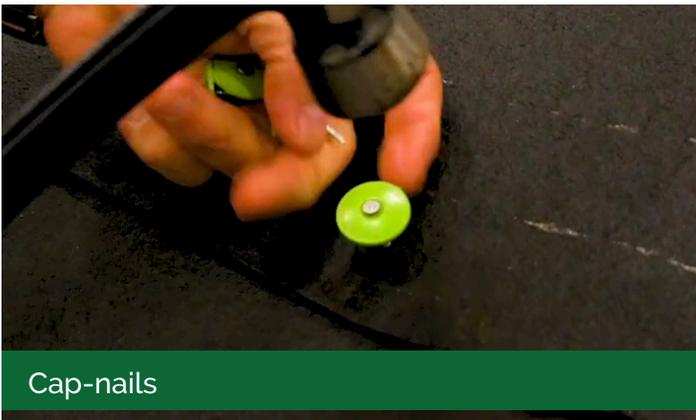

Cap-nails



No fasteners on eave - drip edge will go here

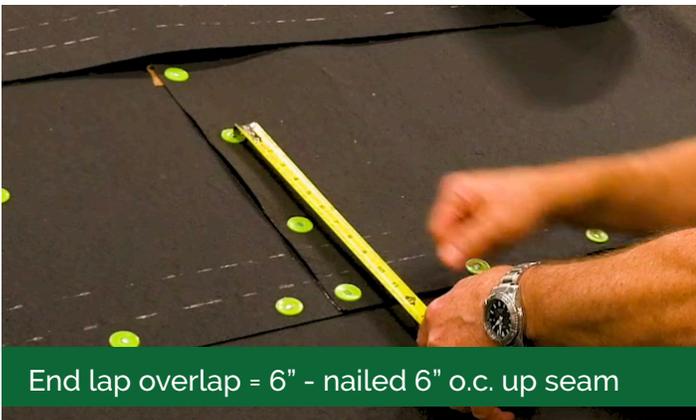

End lap overlap = 6" - nailed 6" o.c. up seam

Write the address on the roof deck.

Take photos of:

- the entire roof deck
- starter strip
- laps
- the nail spacing (show a tape measure)

